

THE "KIDDIES' CINEMA"

Prov. Patent No. 25965/31


SHOWS REAL MOVING PICTURES 12 Nursery Rhyme Pictures

TITLES

- | | |
|------------------------------|------------------------|
| 1. HUMPTY DUMPTY | 7. JACK and JILL |
| 2. TOM, TOM, THE PIPER'S SON | 8. SEE SAW MARGERY DAW |
| 3. WEE WILLIE WINKIE | 9. LITTLE MISS MUFFET |
| 4. OLD KING COLE | 10. LITTLE JACK HORNER |
| 5. HICKORY DICKORY DOCK | 11. GEORGIE PORGIE |
| 6. OLD MOTHER HUBBARD | 12. THREE BLIND MICE |

DIRECTIONS FOR OPERATING THE "KIDDIES' CINEMA"

Remove from the back pocket of strut the 6 Picture Discs which illustrate the 12 Nursery Rhymes. (See Fig. 1.) Open the Front Cover and place the required Nursery Rhyme Picture Disc on the Central wheel, by inserting the two small linen tabs through the slits in disc, and fold the tabs

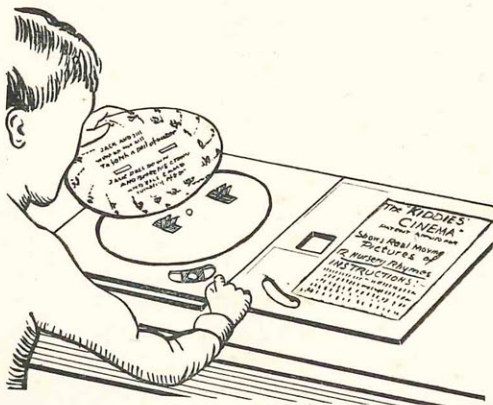


[Fig. 2]

Mount Picture Disc on Central Wheel

right hand in the small lever in the bottom corner of Cinema, and move lever quickly to fullest extent up and down. (See Fig. 3.) This Lever operates the Central Wheel and enables real moving pictures to be seen through the oblong cut-out in the front Cover.

Change the Nursery Rhyme Pictures, remove the picture Disc from the central Wheel inside Cover, and replace it with any other Disc required.

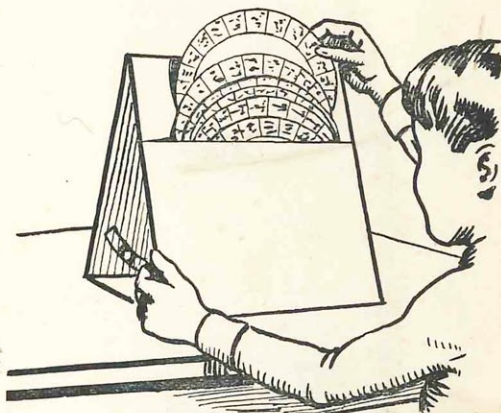

[Fig. 1]

Take Picture Discs from Back Pocket

flat to hold it securely in position. (See Fig. 2.) Close Cover, open out strut at the back and stand the Cinema upright on table or any flat surface. Place the left hand firmly inside the strut with thumb on front cover, and then insert first finger of the



[Fig. 3]

Operate Cinema with Finger