

## 6 Transformer

Your Magic Movie Projector can alternatively be used with a transformer (Not Included) with the following specifications.

- ⚡ **Input** 230V – 50Hz – 6.5W  
⚡ **Output** 6VDC – 500Ma.



Available at most specialist electrical retailers.

## 7 Changing bulb

Your Magic Movie Projector includes a replaceable bulb. Remove film cassette (refer to instruction # 2), unscrew the old bulb and replace with new bulb of the correct specification i.e. 6V - 0.5A. (Illustration 9) **IMPORTANT!** Refer to enclosed supplement sheet for details

## 8 Installing & changing batteries

The projector requires 4 batteries LR14 "C" – 1.5v (Not included) The battery compartment is located at the bottom of the projector.

To install or change the batteries follow the instructions carefully.

1. Remove the screw of the battery compartment cover and remove the cover.
2. Insert 4 batteries LR14 "C" – 1.5v ensuring that they are placed in the compartment as shown (see illustration).
3. Replace the battery compartment cover and tighten screw ensuring that it is correctly in place.

Adult supervision  
is recommended.

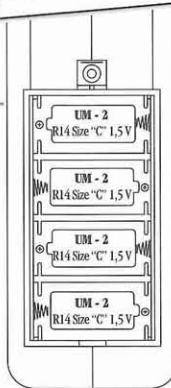


Illustration 9

## PRECAUTIONS

- Keep batteries away from children
- Ensure that the batteries are placed correctly in the compartment and that the polarities (+ / -) are correctly aligned. Follow the instructions shown on the illustration.
- Never mix old & new Batteries.
- Never mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Do not use rechargeable batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Non- rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the projector.
- If projector is not to be used for long periods of time remove batteries from toy to prevent damage.
- The supply terminals are not to be short-circuited.
- Once batteries have been replaced ensure that the cover is replaced correctly.
- Please keep this information for future reference.

## Care and maintenance of your Magic Movie Projector.

Attention adults.

Please read the following instructions carefully before using the projector and explain them to your children to ensure trouble free operation.

- For correct operation and optimum viewing, it is recommended that the films be projected on the screen incorporated in the cover of the box and in a dark room.
- If at any time during operation the film appears to need unnecessary force to make it turn, please wind film in opposite direction to that which was being used during projection. This will ensure that the film continues to move freely during projection.
- To ensure correct operation of the projector it is recommended that after long periods of use a light coat of vaseline be used to lubricate the space between the handle and the housing for the cassettes.

Please keep  
this  
information  
for future  
reference.

**CHARACTER OPTIONS LTD.**  
Lees Brook Mill, Lees Road, Lees,  
Oldham OL4 5JL  
United Kingdom  
Tel. 0161 633 9808

# Magic Movie Projector

"The endless movie projector"

## Instructions

Discover the  
fabulous world  
of cinema with  
**Magic Movie  
Projector**  
with sound

### Contents:

- 1 Projector
- 2 Films with sound
- Screen incorporated in box cover

FORWARDS,  
BACKWARDS,  
SLOW, FAST.





## 1 Screen assembly

Lift the cover of the Magic Movie Projector box. Unfold the flaps and slip them into the sides of the cover as shown (illustration 1). Lower cover until it sits on the base of the box making sure that the screen is situated at right angles to the base to ensure perfect viewing when projecting. (Illustration 2).

You are ready to start projecting!

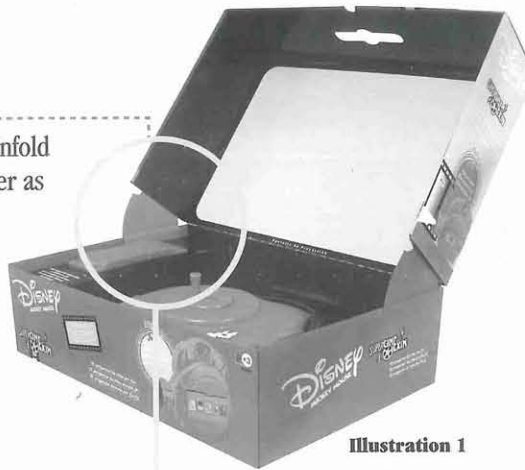


Illustration 1

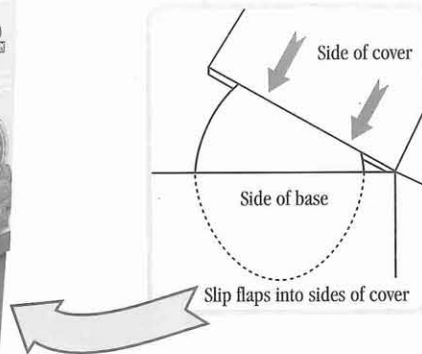


Illustration 2

## 2 Film assembly onto Magic Movie Projector

Slip the film cassette into the space at the side of the projector as shown. Use the figure on the sound buttons as reference for proper positioning of the film cassette (Illustration 3). Press the cassette in to the housing ensuring that it "clicks" into place. To remove the cassette, press the button in the centre of the projector handle on the opposite side to the cassette.

Helpful Hint: Push the button all the way in to get the cassette out properly (Illustration 4).

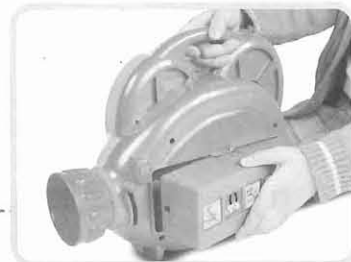


Illustration 3

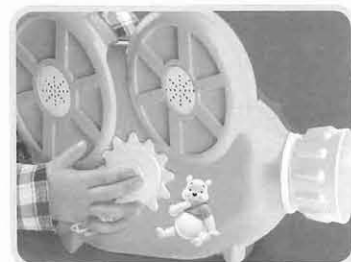


Illustration 4

## 3 The show begins

Once the screen has been set up and the cassette installed onto the projector, slide the switch situated at the left side of the projector to the position "on". (Illustration 5). Place the projector approximately 110 cms. to 120 cms. in front of the screen. To ensure perfect viewing position projector properly and adjust the distance so that the film being projected fills the entire white space of the screen.

NOTE: For best results, it is recommended that Magic Movie Projector films are projected in a room, which is completely dark.

The next step is to focus the film correctly. To perform this operation turn the projector handle until an image of one of the characters is projected as large as possible onto the screen.

**How do you focus the image?** Once you have selected an image, move up and down the lever that is in the left side the projector until you get the right image (Illustration 6).



Illustration 5



Illustration 6

## 4 How to use the sounds

There are five sound effects included in the movie cartridge. To play the sounds you will have to press the button of the selected sound. An appropriate sound corresponds to a portion of the film as depicted on the picture on each button, but you can press whatever button in any part of the movie story (Illustration 7).

It is very easy! Press one of the buttons of the cartridge and your movie will have sound.



Illustration 7

## 5 Let the show begin

With Magic Movie Projector you can project forwards, backwards, slow or fast. You decide how you want to see the film simply by turning the projector handle at the speed you want and the direction you want (Illustration 8).


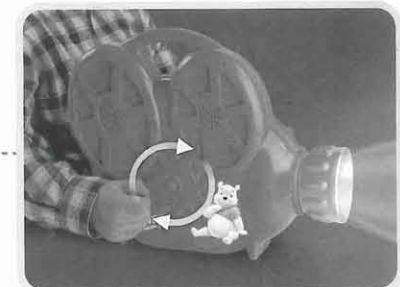


Illustration 8

# CHANGING THE BULB

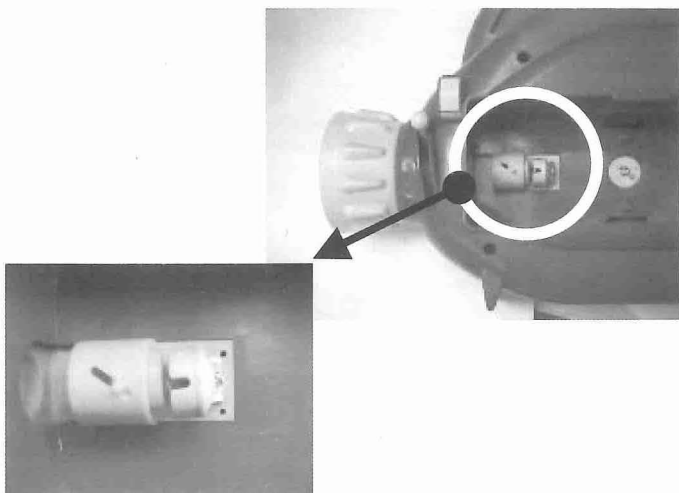

## IMPORTANT NOTICE TO PARENTS/CARERS !

- **Bulb replacement should only be done by an adult.**
  - **Always remove batteries from your Magic Movie Projector or disconnect from the mains adaptor before replacing the bulb.**
  - **Ensure your Magic Movie Projector is switched OFF and wait for a few minutes (at least 5 minutes) after switching OFF your Magic Movie Projector before replacing the bulb.**
  - **Your Magic Movie Projector uses a 3W max (6V – 0.5A) rated light bulb. Please ensure no other bulb is used.**
- 
1. Remove the screw and lift off the bulb cover.
  2. Carefully rotate the bulb anticlockwise, lift out and dispose of properly.
  3. Replace with a new bulb (not included).
  4. Carefully insert the bulb and lock in place by rotating clockwise.
  5. Replace the bulb cover and screw it in place.
  6. Replace batteries (refer to instruction # 8 in the instruction leaflet).



# Magic Movie Projector

## ORDER FORM

1. Please complete the form below to order other movie films for Magic Movie Projector.
2. Enclose a cheque/postal order made payable to Character Options Ltd.
3. Send the completed form and cheque/postal order to: Character Options Ltd.  
Customer Services department, Lees Brook Mill, Lees Road, Lees, Oldham OL4 5JL  
(Please retain this address for future reference.)

1. Please send me the following movie films for the Magic Movie Projector:-

Description	Cost Per Unit (Includes Postage & packaging)	Quantity Required	Total Cost
<b>Mickey and Friends</b>			
Mickey and Goofy Moving Houses	£ 9.99		
Pluto and the Crazy Goat	£ 9.99		
Mickey and the Music Band	£ 9.99		
To the Rescue of Minnie	£ 9.99		
<b>Disney Princess</b>			
Cinderella	£ 9.99		
Snow White	£ 9.99		
Beauty and the Beast	£ 9.99		
Little Mermaid	£ 9.99		
<b>Winnie</b>			
Winnie & the Honey Bees	£ 9.99		
Winnie stuck in a hole	£ 9.99		
Winnie's Greatest Adventure	£ 9.99		
Winnie and friends on a Picnic	£ 9.99		
<b>Total Cost</b>			£

NAME:.....

ADDRESS:.....

.....

.....

POSTCODE:.....

TEL NO:.....AGE:.....

PARENT/GUARDIAN SIGNATURE:.....

### TERMS AND CONDITIONS

1. Orders made subject to availability.
2. Please allow 14 days from receipt of order form for delivery.
3. Orders only valid using this form.
4. If you are under 16 years of age, please ask a parent/guardian to sign the form.
5. Responsibility cannot be accepted for orders lost or delayed in the post.  
Proof of posting is not proof of delivery.
6. This offer is open to residents of the UK and Eire only.
7. Suitable for ages 3+