



INSTRUCTIONS

To Open Projector slide Knob to central position of slot as shown in diagram, Fig. 1.

Insert Flashlamp Battery between the five pillars shown as black circles.

Ensure that Battery Terminal strips are positioned according to diagram, i.e., with the short strip on the left and the long strip on the right, and check that they are firmly touching metal contacts of the projector. Test that the Battery is correctly fitted by sliding Knob forward. If correct Bulb will light up.

Important. When closing Projector set Knob to central position (Fig. 1) and close gently to avoid trapping film in casing.

To Operate slide Knob backward and forward. The picture can be projected on any light coloured surface.

To Change Film open Projector with Knob as Fig. 1. Now set Knob as far left as it will go. Remove old film.

Replace new film (with title on left) by sliding film over Metal Spring (Fig. 2) then under Knob, and finally outside the posts, i.e., between posts and outer casing (Fig. 3). Push gently down in place and then slide Knob forward and check that it engages with slots in film correctly and that film works freely around posts.

To Change Bulb remove bulb holder (Fig. 4) by sliding out towards you. Replace bulb and refit holder making sure that end of bulb makes firm contact with Metal Strip as in Fig. 5.

Under no circumstances should the Lenses be disturbed.

Film. Before projecting, and occasionally thereafter, it may be advisable to wipe the film with a piece of soft material to remove dust particles.