

IT'S *Cragstan* JAPAN  
90107 for TOYS

8mm

IT'S *Cragstan* JAPAN  
90107 for TOYS

# PROJECTOR

WITH SCREEN AND FILM  
POWERED BY BATTERY DRIVEN MOTOR



OPERATING INSTRUCTION


8mm

IT'S *Cragston*  
for TOYS


# PROJECTOR

POWERED BY BATTERY DRIVEN MOTOR


## OPERATING INSTRUCTIONS

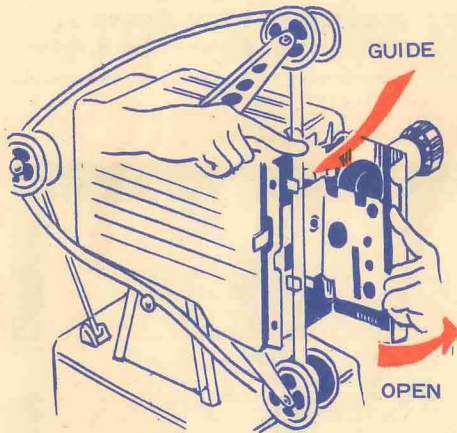

- (1) INSERT BATTERIES IN BASE OF PROJECTOR.
- (2) OPEN OUTER COVER AND INNER FILM BRACKET.

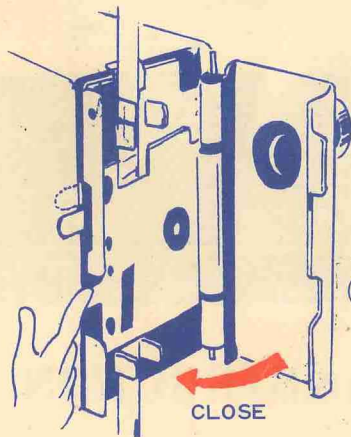


- (3) PLACE FILM OVER PULLEYS.
- (4) SET FILM PROPERLY BETWEEN FILM GUIDES
- (5) CLOSE INNER FILM BRACKET AND OUTER COVER.

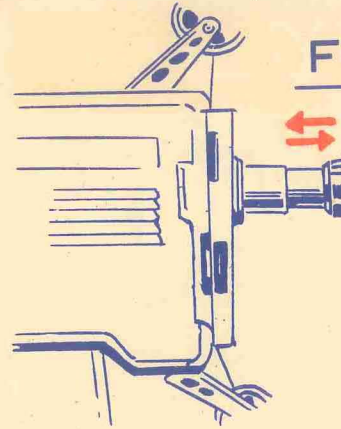


## FOCUSING & CLARITY

SET SWITCH ON "LITE" POSITION, ADJUST LENS AND DISTANCE UNTIL MAXIMUM CLARITY IS OBTAINED. SET SWITCH TO "START" MOVING PICTURES

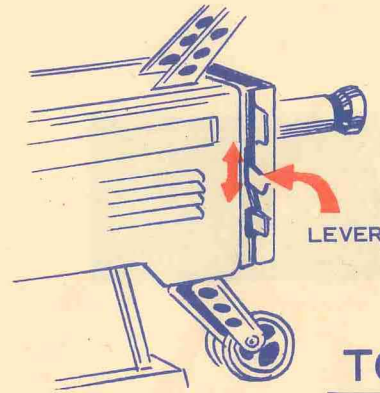

HORIZONTAL ADJUSTMENT IS OBTAINED BY MOVING LEVER "UP" OR "DOWN"

## TO REPLACE BULB

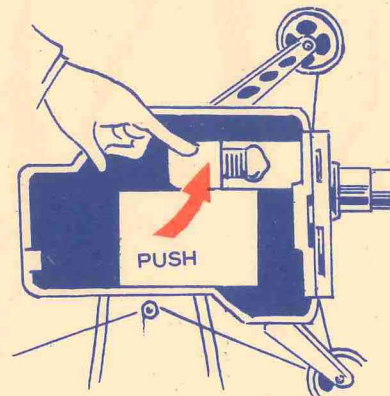

REMOVE OUTER COVER, TURN BULB HOUSING BRACKET OUTWARD, UNSCREW BULB

TRADE  MARK  
PRINTED IN JAPAN