



PROJECTOR

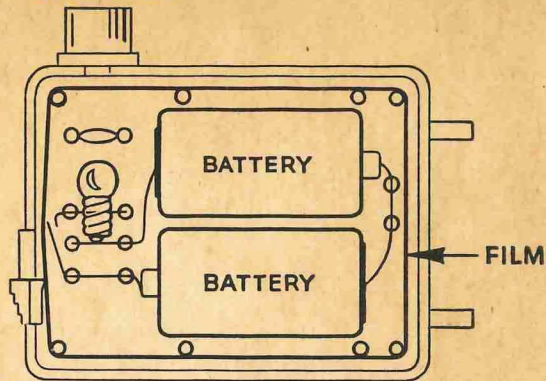

THEATRE SET-UP

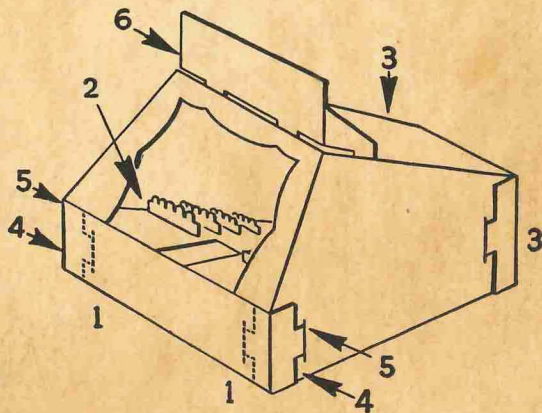

FILM FUN THEATRE

INSTRUCTIONS

PROJECTOR — Remove platform with Projector. Open Projector at top and insert two size D flashlight batteries according to diagram.

THEATRE SET-UP — Remove from box and lay out flat with black side up, fold and insert tabs into corresponding slots, in numerical order as shown on diagram. Note that audience silhouettes decrease in size toward screen.

TO PROJECT PICTURES — Place Projector in cut-out in theatre. Operate Projector by moving knob back and forth.

TO CHANGE FILM — Set knob in OFF position, then open Projector and carefully remove film. Place new film around corner posts near knob, then between knob and metal spring, then around the other three corner posts and push down in place.

SEE YOUR DEALER FOR ADDITIONAL

FILM FUN FILMS

FILM FUN INC.

5 McKibben St. • Brooklyn 6, N. Y.