


# THE NEW "IVIC" MODEL 16mm CINE PROJECTOR

## INSTRUCTIONS.

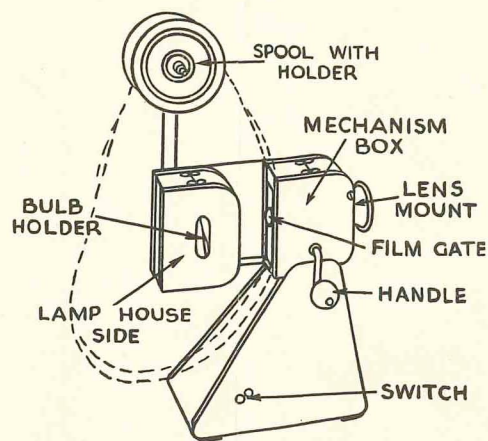

### To Operate :

Fit Holder and Spool into Socket on side of Projector, place the Projector on a firm table with your screen of white paper, cardboard or blotting paper about 4 ft. away. Insert your "Filmette" loop in 'gate' of machine and over spool. Switch on, hold the machine with your left hand and turn handle clockwise with right hand.

### How to insert loop into Projector :

Hold open the brass film door — place loop into the film channel and let door close. Gently ease film up or down until claw has clicked into a film hole. (NOTE: The film should be placed in Projector with the picture upside down. The lens shows it right way up.)

### To get a sharp well-lit picture :

Move the lens mount backward or forward until the picture is sharp. (Re-set the lens for different distances.) Adjust bulb (at side of lamp-house) until a maximum even light is obtained.

### NOTES :

To insert new bulb. Remove lamp-house side, ease spring connection at rear of bulb, unscrew bulb from holder and replace with a new one.  
Keep film channel clean.  
Switch off after use.

**DO NOT** turn handle backwards, or pull film upwards.

” ” open forward box.

” ” bend or alter tension of film door.

**ALL** "Filmettes" are non-inflammable.

**Colour "Filmettes"** : As these require a little more light than Black and White "Filmettes," place your Projector nearer screen to obtain best results. (Colour films have holes on one side only.) Correct method of insertion into gate: Holes to your left, picture upside down.


**8 ft. LOOPS** : Stand Projector near right edge or rear of the table and allow the loop to hang down.

**Battery to use** : Ever-Ready Twin Cycle Lamp No. 800, 3 volt, with side and top strip contacts or the equivalent in other makes. To fit into Projector base : Before inserting, slightly arch top contact strip. Insert battery with side contact strip upwards, top contact strip facing to rear to engage with switch rod.


**Bulb to use** : Ever-Ready Lens End Bulb, 2.2 volt, No. 2225.  
Battery and Bulbs obtainable at all Ever-Ready stockists.

## How to Make or Repair a Loop from Your "Filmette"


First cut off arrow and serial number at end of film. (If any)

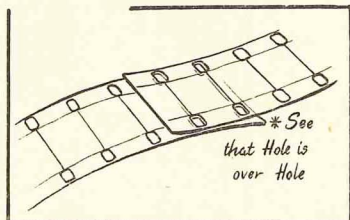

1.—Take the two ends of the 'Filmette' and overlap the first two pictures or 'frames' with the last two pictures, so that the film holes lie **EXACTLY** on top of each other.

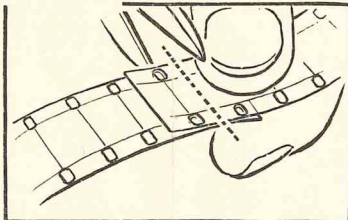

2.—Holding the overlapping ends firmly cut with scissors through the double thickness of film. Make sure you cut **only** through the centre of a picture as illustrated.

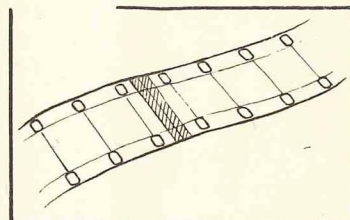

3.—When now examined you will see that the two ends of the film match up exactly. Now form your film loop by lining up the two cut ends together but **NOT** overlapping.

Seal with a small piece of Sellotape on both sides — making sure that the film holes are **NOT** covered with the Sellotape  
Your loop is now ready for use.

**IMPORTANT NOTICE** : All 'Filmettes' are specially treated for protection and long life by a chemical wax solution. If you find the film slips in the gate, rub the film between finger and thumb, this will remove any excess wax.


**TO CLEAN LENSES** : Use only soft brush or clean, soft fabric.

# INSTRUCTIONS

For inserting **EVER READY** batteries & bulbs





in the **PEAK** (Mark II) Home Movie Projector

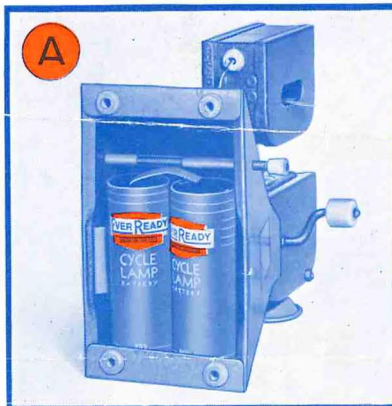

## (A) FITTING YOUR EVER READY BATTERY

Fit Ever Ready Battery Type No. 800—3.5 volt placing the brass contact inwards and the top contact suitably bent as illustrated meeting the switch bar in the base of the projector. This will light up when the switch bar is pushed across the top contact.

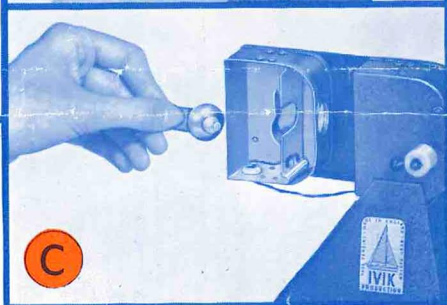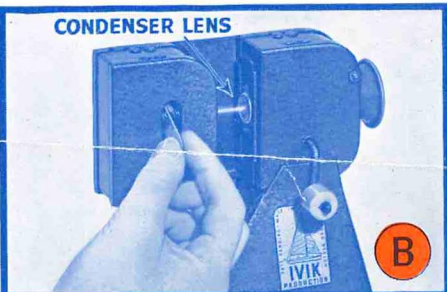

## (B) LIGHT BEAM ADJUSTMENT

To obtain correct beam through the condenser lens on the gate, adjust bulb holder arm at the side of the lamp house. Do not remove the lamp house cover.

## (C) REPLACEMENT OF EVER READY BULB No. 2225 LENS END 2.2 VOLTS

To replace bulb remove lamp house cover only—very lightly depress contact spring and the bulb holder will come out. Unscrew bulb and replace.

**EVER READY**  
for your  
**'PEAK'**  
HOME MOVIE  
PROJECTOR

"The Peak" (Mark II) Home Movie Projector is distributed to the world by  
**J. S. FRIEZE & COMPANY LIMITED, 37, Devonshire Street, London, W.1.**  
Telephone: WELbeck 2994 (3 lines).