


INSTRUCTIONS

For inserting **EVER READY** batteries & bulbs

in the PEAK (8 mm.) Home Movie Projector

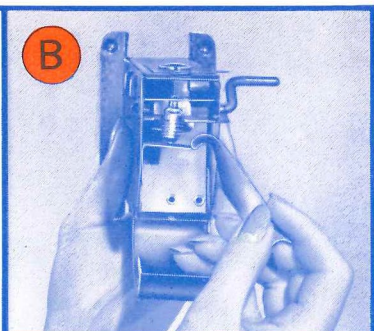

(A) FITTING YOUR EVER READY BATTERIES

Slide out the base of the machine, and place two Ever Ready U2 batteries into the metal channel, one behind the other, with the central contact pointing towards you. This is the opposite way to which the batteries are used in electric torches. **THIS IS MOST IMPORTANT**, otherwise the switch will not work. Now slide the base back. The lamp will then switch OFF when the base is pushed right in, and switch ON when the base is pulled out $\frac{1}{2}$ inch.

(B) REPLACEMENT OF EVER READY BULB No. 2225 LENS END 2.2 VOLTS

The curved lid of the machine is hinged at its lower end, and is opened by pulling the upper end back. Having opened the lid, remove the bulb with the tool provided. It will disengage itself from the bulb holder. Replacing the new bulb is easily done by pushing it gently down with the other end of the tool. Now move the bulb adjuster until the nose of the bulb finds its correct seating.

(C) LIGHT BEAM ADJUSTMENT

Stand the screen up four to five feet from the projector and switch on. Then by using the lamp adjuster, move bulb in all directions until you obtain a brilliantly illuminated rectangle, where the picture is going to be. This adjustment is essential for good pictures.

EVER READY
for your
'PEAK'
HOME MOVIE
PROJECTOR

"The Peak" (8 mm.) Home Movie Projector is distributed to the world by
J. S. FRIEZE & COMPANY LIMITED, 37, Devonshire Street, London, W.1.

Telephone: WELbeck 2994 (3 lines)