


PEAK

16mm CINE PROJECTOR

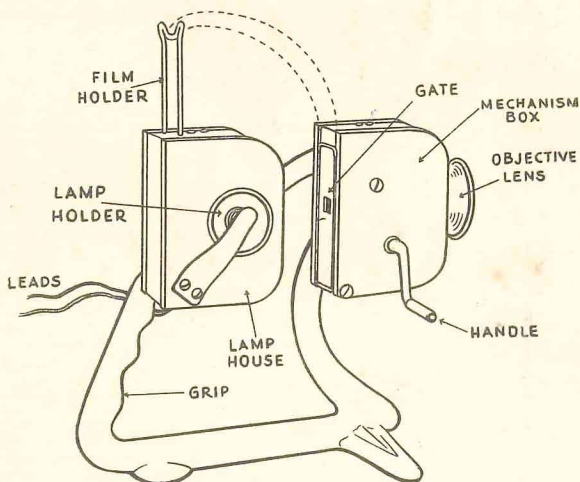

INSTRUCTIONS FOR USE

1. Place the projector on a firm table; connect the leads to the terminals of the battery and the lamp will light. Point the projector towards the screen which should be about four feet away and should have a flat, white or silver surface.
2. There are only two adjustments necessary. (a) To focus turn the objective lens easing it backwards or forwards as necessary until the edges of the lighted part of the screen are sharp. (b) The screen should be evenly lighted, if it is not then the lamp must be adjusted by turning the lamp holder (without removing it) until the correct lighting is obtained. Pull the film holder out to its full extent (this is found at the back of the lamp house).
3. Select the film to be shown, turn it upside down, open the gate and insert the film making sure that the slots engage in the claws. Grip the projector with the left hand and turn the handle with the right hand.
4. To change the bulb. Remove the lamp house, change bulb and replace.

NOTES: The lenses should be kept clean, this is best done with a clean soft rag or by blowing. The film track and gate should likewise be kept clean or the films will get scratched. Damaged films never give good pictures while torn or crumpled films may not give any results. If the lamp does not work it may be due to bad connections, burnt out bulb or a dead battery.

DO NOT UNDER ANY CIRCUMSTANCES Turn handle backwards Try to pull film upwards through the gate - Open the mechanism box Bend the gate or alter the tension of the gate spring - Scratch tear or crumple your films. - Do not forget to disconnect the battery after use

If you wish to use longer films stand the projector near the right edge of the table and allow film to hang down.