


The Peak 16mm Projector

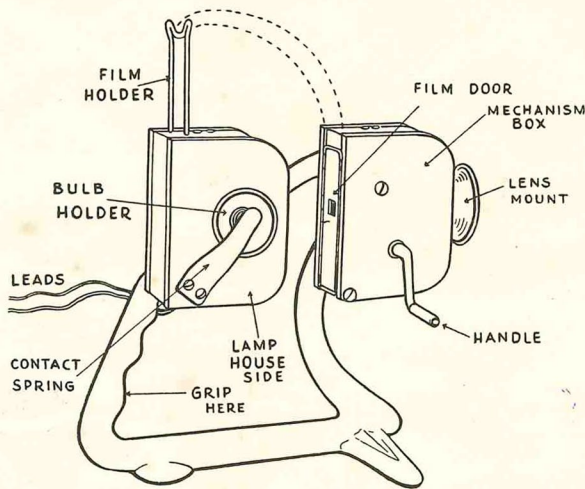


INSTRUCTIONS

To Operate :


Place the Projector on a firm table with your screen of White paper, cardboard or blotting paper, about 4ft. away. Raise the wire film loop holder at back of machine to its fullest extent. Insert your "Filmette" loop in 'gate' of machine and over wire loop holder. Connect the two leads to a $4\frac{1}{2}$ volt battery to light bulb. Grip the machine with left hand, and turn handle clockwise with right hand.

HOW TO MAKE A LOOP FROM YOUR "FILMETTE":


First cut off arrow and serial number at end of film.

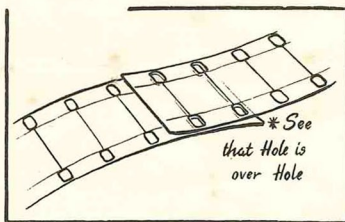

1.—Take the two ends of the "Filmette," and overlap the first two pictures or 'frames' with the last two pictures, so that the film holes lie EXACTLY on top of each other.

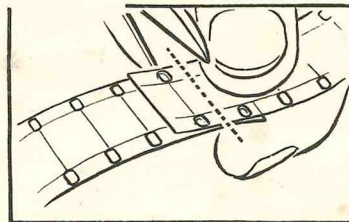

2.—Holding the overlapping ends firmly, cut with scissors through the double thickness of film. Make sure you cut only through the centre of a picture as illustrated.

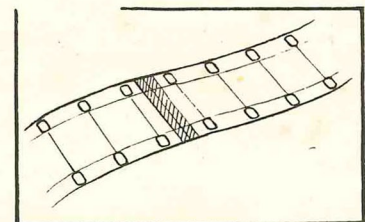

3.—When now examined you will see that the two ends of the film match up exactly. Now form your film loop by lining up the two cut ends together, but NOT overlapping.

Seal with a small piece of Seltape on both sides—making sure that the film holes are NOT covered with the Seltape. Your loop is now ready for use. If your loop has holes down one side only, see that they are on the left when placing in Projector.

How to insert loop into Projector :

Hold open the brass film door—place loop into the film channel and let door close. Gently ease film up or down until claw has clicked into a film hole. (NOTE: The film should be placed in Projector with the picture upside down. The lens shows it right way up).

To get a sharp well-lit picture :

Move the lens mount backward or forward until the picture is sharp. (Re-set the lens for different distances). Turn bulb holder (at side of lamp-house) until a maximum even light is obtained.

NOTES :

To insert new bulb. Remove lamp-house side; unscrew bulb from holder and replace with a new one. Do not attempt to remove bulb holder before bulb has been taken out as this will damage the contact spring.

Keep film channel clean.

Disconnect the battery after use.

DO NOT turn handle backwards, or pull film upwards.

- ” ” open forward box.
- ” ” bend or alter tension of film door.
- ” ” interfere with bulb contact spring.

ALL "Filmettes" are non-inflammable.

Colour "Filmettes" : As these require a little more light than Black and White "Filmettes," place your Projector nearer screen to obtain best results.

8ft. LOOPS : Stand Projector near right edge of the table and allow the loop to hang down.