

# Instructions for use

## TO PUT THE SUPER MINICINE INTO OPERATION

Screw in the handle (1) by rotating it in a clockwise direction. If the projector is to work from the mains, fit the MiniCine transformer adaptor into the nearest lampholder and plug the socket of the transformer into the two terminals (2). Should no electricity supply be available, remove the socket from the transformer, fit it to a piece of twin flex and connect to an ordinary 6v. hand-lamp battery, such as EverReady R996.




**The MiniCine transformer must not be used on a D.C. supply.** In this case a MiniCine Resistance may be obtained from your dealer or from us direct.

**TO SHOW A MINICINE ANIMATED FILM** slide it into the righthand slot (3) as far as it will go. The film should be inserted with the pictures upside down, and the title printed in large

letters denotes the beginning of the film strip. Press down the winding knob (4) and turn it in this pressed down position until the first picture is projected on to the screen.

The film is focused by means of the focusing bush (6) on the front of the projector. A distance of one to two yards between the projector and the screen is usually quite adequate. The projector is now ready for use and is operated by merely turning the handle (1).

**TO SHOW MINICINE STILL FILMS, and UNIVERSAL 4-ROW FILMS** alter the two-position spring bush (7), pull and turn. The handle (1) should rotate freely when animated films are being shown. When "stills" are being shown, this bush should be in the other position, *i.e.*, pressed against the case of the projector and the film strip started with the film carriage in the top position. By rotating the knob (4), the top row of pictures will then be projected. The handle (1) should then be used to select the next row of pictures and so on.

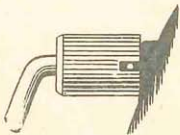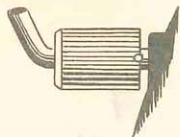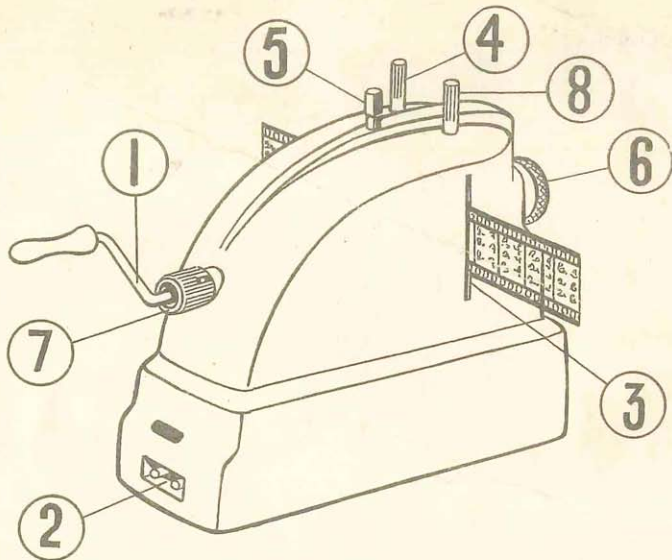


**TO SHOW UNIVERSAL 2-ROW FILMS,** use the levelling knob (8) and the frame adjuster knob (5) which will open up the frame from 9mm x 6mm to 9mm x 9mm, as required for the Eagle, Girl and T/V Comic Films. Proceed as follows :—

- A. Alter the two-position spring bush (7) so that it is pressed against the case of the projector and turn the handle to lift the film carriage to the top position.
- B. Insert the film, show the first picture and open up the film frame to the required size by turning the frame adjuster knob (5). Rotate the film winding knob (4) to project each "still" of the first row, then after completion turn the handle again to select the bottom position of the film carriage to show the second row of pictures.
- C. Now lift the levelling knob (8) gently approximately  $\frac{1}{4}$ in. above the lowest level.

**TO REPLACE AND FOCUS THE BULB OR CLEAN THE LENSES.** It should only be necessary to open the projector to replace and re-focus the bulb, and in certain cases, to clean the lenses. This may be done as follows :—unscrew the handle (1), at the same time holding firmly the winding knob (4) without pressing it down. Unscrew the focusing bush (6). Finally remove the three screws in the base of the projector and carefully remove case, if necessary, pressing gently against the knob (5). The old bulb is removed by sliding back the combined reflector and bulb holder and turning the bulb holder up as shown in the diagram. The new bulb should be 6 volts .5 amps. After fitting the new bulb and returning it to its previous position, it should be properly focused by switching on the projector and adjusting the bulb to a position which ensures maximum brilliance on the screen. When this has been achieved, the case should be replaced and the projector is once more ready for use. If necessary, the lenses may be cleaned by dusting with a soft clean cloth or a fine brush, but on no account should anything hard be used as this may damage the surface of the lenses.

If the projector should be dropped accidentally, it may be necessary to re-focus the bulb by the method which has been described above.

Please do not hesitate to write us about any trouble you may experience. We shall be pleased to advise you.

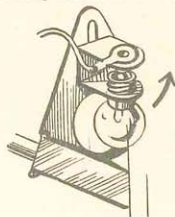

PLEASE TEAR OFF THIS REGISTRATION CARD AND POST TODAY TO :—  
**MARTIN LUCAS LIMITED, 1B, RAMSDEN ROAD, LONDON, S.W. 12.**