



AT HOME IN THE DARK

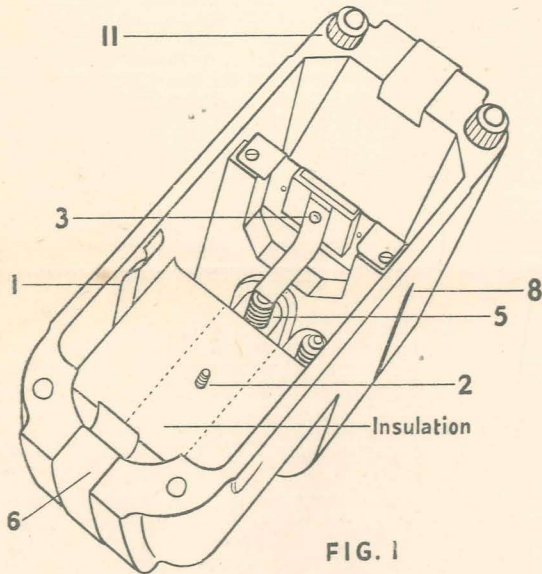


FIG. 1

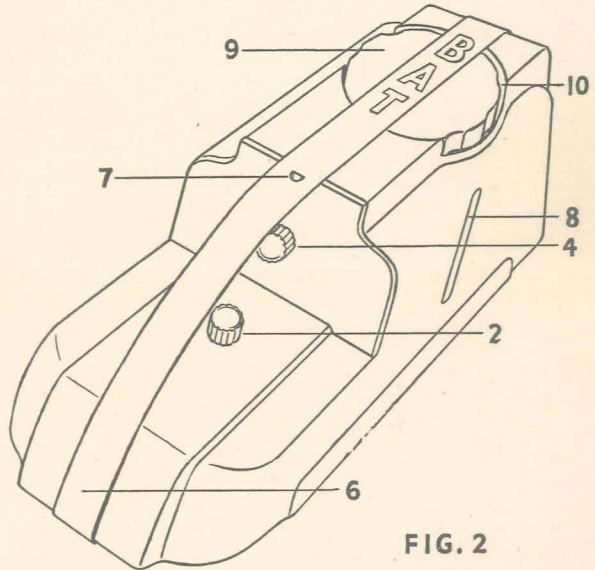


FIG. 2

INSTRUCTIONS FOR USE

Fig. 1.

A. After removing the "BAT" from the case so that the projector screen is exposed, make sure that the snap fasteners are locked to keep the screen tight.

B. Holding the "BAT" as shown in sketch, insert the battery under the spring clip (1) so that the contact between the cells is opposite the switch (2). The top contact on the battery should engage with the contact (3). Test lamps and battery by turning screw switch (2). If lamp lights on inserting battery, turn switch (2) to left until light goes out.

Fig. 2.

Place the "BAT" on a table between four and six feet from the screen and switch on, when the screen should be fully, and evenly illuminated. If dark patches appear on the screen adjust the lamp by means of small knob (4); tightening knob when brightest point is found.

A spare bulb is carried in dual holder (5). The lamp is changed by unclipping band (6) so that the tongue (7) releases the back plate; remove this from the projector and change the bulb.

C. With the shiny side of the film towards the front and the arrow pointing to the slot (8) on the right of the projector, insert the end of the film strip as far as it will go. Gently rotate the large knob (9) in a clockwise direction when the film will be gripped and passed through the gate. The title or first picture will follow the arrow and will be centred on the screen by the rotation of the knob (9). Each succeeding picture will be shown by rotating the portion of the knob exposed at 10.

D. The "BAT" may be levelled, or the picture centred by adjusting the screw feet (11), and the picture focussed clearly by sliding the lens in its mount.

Clean the screen occasionally by washing with soap and water.

KERSHAW SOHO (SALES) LTD.
37/41 MORTIMER STREET,
LONDON, W.1

AGENT: