

HOW TO REMOVE MOVIE PROJECTOR FROM BOOK

Cut off plastic tie and discard. Hold on to handle and lift projector straight out of base. To store projector, simply snap back into the base.

HOW TO USE THIS PROJECTOR

- Pick a clear space on a light-colored wall or ceiling three to five feet away.
- The biggest image can be seen when the projector is five feet from the wall or ceiling.
- Use Disk 1 to begin. Change disks as indicated in the story.
- Slide the picture disk into the slot in the top of the projector as shown.
- Turn the disk to the right as you read through the story. The numbers next to the text correspond to the numbers on the projected images. Use the focusing ring to focus the pictures.

