

Fig. 4


- (5) **TO FIT A NEW BATTERY** (Pair of Type U.2 1½ volt each). Unscrew knob "C" (Fig. 2) and remove the battery housing cover. Take out the old batteries and fit the replacements, making sure the two batteries are reversed and making contact at points marked "D" (Fig. 3).
- (6) **TO FIT A NEW BULB** (2.5 volt 0.3 amp). Proceed as for fitting a new battery. Unscrew the bulb from its mount. Screw in the new one, making sure it makes good contact.

EXTRA FILMS of 24 PICTURES WITH READING

- | | |
|-----------------------------------|------------------------------------|
| No. 43 Snow White & the 7 Dwarfs. | No. 51 Donald Chips the Chipmonks. |
| No. 45 Toy Tinklers. | No. 53 The Reluctant Dragon. |
| No. 49 Three Little Pigs. | No. 56 Lambert the Lion. |
| No. 50 Mickey & the Beanstalk. | No. 58 Robin Hood & his Merry Men. |

PRICE each (In U.K.) 1/3d.

Produced and Distributed by **JOHNSONS of HENDON.**
Copyright **WALT DISNEY PRODUCTIONS Ltd**

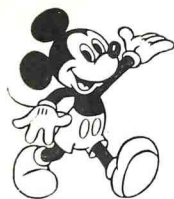

**WALT
DISNEY**



MAG-O-FLEX
PROJECTOR VIEWER



Fig. 1

INSTRUCTIONS FOR USE

The Walt Disney Projector Viewer is already loaded with a film containing 5 film stories (120 pictures) in one strip, fitted with batteries and bulb and, therefore, ready for immediate use.

- (1) Raise the lid until it clicks into position at an angle of 45° (Fig. 1). The picture is then immediately projected on to the screen.

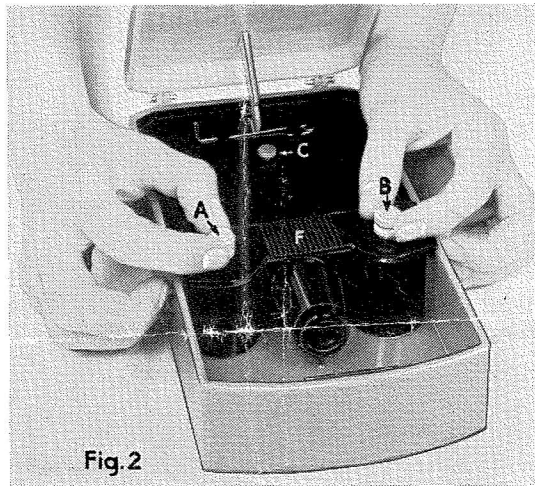


Fig. 2

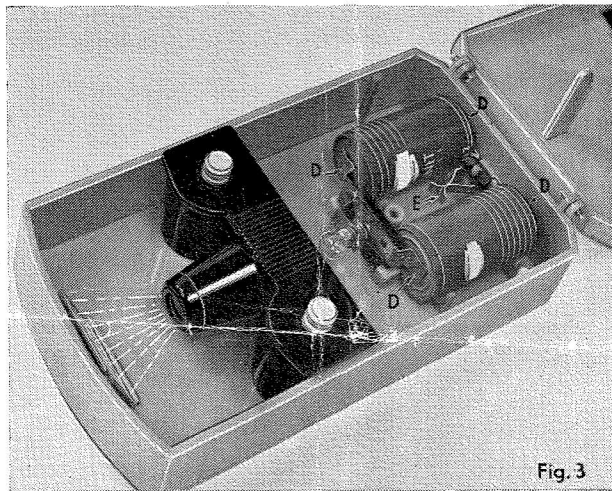


Fig. 3

- (2) Successive pictures can then be brought into position by turning knob "A" anti-clockwise. The film is divided into stories—120 pictures in all. When you feel a "check" you have come to the end of the film. Do not force it, but rewind the film by turning the knob "B" in a clockwise direction as shown by the arrow (Fig. 2).
- (3) **SWITCHING OFF THE LIGHT.** The light is automatically switched off when the lid of the Viewer is closed and the tongue passes between the contacts, "E" (Fig. 3) separating them.

- (4) **CHANGING THE FILM.** See that the film to be removed is rewound on to Spool "A" (Fig. 2). Lift off the spool chamber lid "F" (Fig. 2), leaving the battery chamber lid in position. Leave the end attached and remove both spools as shown in Fig. 4. Secure the two spools together with an elastic band. Take your new film, unwind it about 4" and thread the end into the slot of the spare spool supplied with the Projector. The picture should be upside down in relation to the knob at the end of the spool. Insert the film between the condenser "G" and the film stage, (Fig. 4).