

INSTRUCTIONS FOR OPERATING THE JUNIOR TELEVISION PROJECTOR SET.

Insert Battery (Use Ever-Ready No. 126) or (Siemen's Full o' Power B6) in compartment at rear of Set. Connect terminals, and slightly push battery inwards so that it is gripped in the compartment.

Wind up clockwork Motor, insert film upside down with the shiniest side facing the lamp, push film well down in gate between rubber roller and spring pad. Switch on light, by right hand knob, start motor left hand knob, the programme can be run through, or stopped at each picture by the control knob. Always turn Control Knobs to RIGHT.

Should no light appear on the screen, when the set is switched on, see all battery connections are tight, the bulb well screwed down in holder, check for broken wires, bulb, or flat battery.

To obtain best picture, adjust by pushing lamp holder up or down slightly, and turning either to left or right.


To replace bulb, pull out bulb holder from rear of Tube.

Keep the rubber feed roller free from dirt etc.

A special transformer with 6 volt bulb can be supplied for A.C. Mains only, priced 15/-, this eliminates the use of batteries.

A comprehensive list of Programmes is enclosed.

INSTRUCTION DIAGRAM

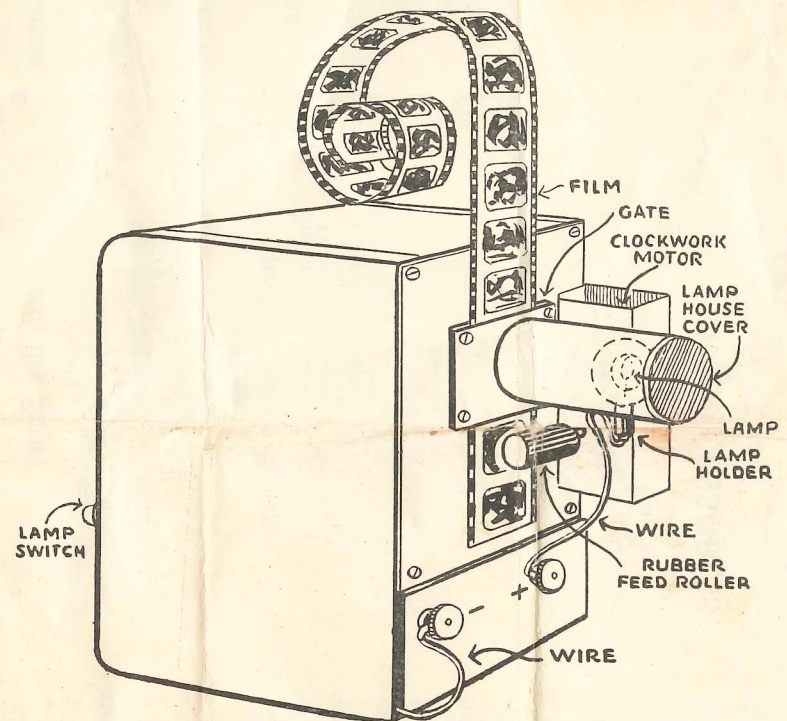

NOTE:—Bulb and Holder are packed separately in box for safety, insert in lamp house and adjust, as instructions.