

INSTRUCTIONS FOR USE

Hold the Sightseer in the viewing position with the trigger downwards and insert the beginning of the film with the dull surface towards you, in the slot at the left-hand side of the instrument. When the white line is visible through the right-hand slot, the main title is now placed for viewing.

To bring the first picture into position, place the trigger finger of the right hand around the trigger and move it briskly to the right as far as it will go and then release. The entire film can be viewed by repeating this simple operation.

When the trigger is in the position of rest, the film is disengaged and can be moved to left or right by hand without any fear of damage to the film or instrument.