

Instructions
for attaching the
VIEWSMASTER

# LIGHT ATTACHMENT to the MODEL E VIEWER

Hook Fixed Clamp at the top of the Light Attachment into the Reel Slot at the top of the Viewer.

Remove Round Nut at bottom of Attachment.

Fit Loose Clamp to bottom of Viewer and replace nut.

## TO INSTALL BATTERIES

Twist coin in Slot in the Small End of the Attachment and remove top cover.

Lift square light switch Button just enough to put in Size "p" batteries—one Right Side Up and one Up Side Dewn.

Replace cover by slipping Front Notch under Shoulders of clamp, pressing Button forward, then Snap Down the back of the cover.

#### TO LIGHT

Press Square Button on Top of Light Attachment.

#### TO REPLACE LAMP

Remove Light Attachment from Viewer.

Pull out square light shield. If necessary remove white reflector by pressing down and pulling forward at the same time on the top edge of the reflector.

Unscrew burned-out lamp and replace with a new No. 14 lamp.

Replace reflector by seating the bottom corners between the front and rear plastic studs then press in top edge until reflector snaps into place.

Insert tab of light shield into slot in bottom of metal clamp and press bottom of shield into place.

### **PLUG-IN TRANSFORMER**

A View-Master Plug-In Transformer may be used in place of batteries. Transformer for Model D & E Viewers plugs into the bottom of the Light Attachment.

TRADE-MARK REG. U.S. PATENT OFFICE—MARCA REGISTRADA LITHO IN U.S.A., 

® SAWYER'S INC., PORTLAND, 7, OREGON