

## FILM LOCK INSTRUCTIONS

Lock end of film in reel by inserting edge of film between spring clip and round plastic post.

**LOADING:** Remove empty take-up reel and place reel of film to be viewed on spindle. Perforated sprocket holes in film should be facing upwards. Thread film by post (1) through film channel (2) and over roller (3). Press Roller Lever down (4) to engage film on nylon point (5). Pull film gently to ensure film is properly guided through posts (6). Take-up reel is equipped with a film lock to prevent film from pulling out on rewind. Picture can be centered by using frame lever (7) to adjust film channel. To rewind film, press button then crank backwards. **CAUTION** — Before rewinding film be sure film is properly engaged on empty reel. For best performance use only the Aids locking reels.

**AIDS, Inc.,**  
211 Arena,  
El Segundo, Calif.